

Out on the Town by FusionBeads.com



Approximate finished length: 8.5 inches

Beads and other products needed for one bracelet:

- 62 - 4mm Graphite Swarovski Crystal Bicone Beads (04BI1502)
- 38 - 6mm Graphite Swarovski Crystal Bicone Beads (06BI1438)
- 56 - 4mm Pearlescent White Swarovski Crystal Pearl Beads (PL7389)
- 56 - 4mm Light Grey Swarovski Crystal Pearl Beads (PL5016)
- 38 - 6mm Pearlescent White Swarovski Crystal Pearl Beads (PL7391)
- 38 - 6mm Light Grey Swarovski Crystal Pearl Beads (PL5316)
- 22 - 10mm Pearlescent White Swarovski Crystal Coin Pearls (PL7398)
- 9 inches - 3mm Silver Plated Crystal AB Round Bezel Swarovski Crystal Rhinestone Chain (CN9529)
- 9 inches - 4.5mm Silver Plated Crystal AB Round Bezel Swarovski Crystal Rhinestone Chain (CN9509)
- 1 - 10x19mm Three Strand Silver Plated Brass Magnetic Tube Bar Clasp (BM0534)
- 2 - 7x3mm Silver Plated Spring Ring Chain Ends for Crystal Rhinestone Chain (BM4092)
- 2 - 8.5x3.5mm Silver Plated Spring Ring Chain Ends for Crystal Rhinestone Chain (BM4093)
- 4 - 4mm Silver Plated Base Metal 20 Gauge Open Jump Rings (BM2747)
- 14 - 2x2mm Sterling Silver Crimp Beads (SS4047)
- 14 - 3.5mm Sterling Silver Crimp Bead Covers (SS2103)
- 7 feet - Clear Soft Flex Wire .014" Diameter (SM0310)



Tools needed to complete the bracelet:

Wire cutters
Crimping pliers (TL0500)
Chain Nose Pliers
Bead stoppers

Beading Techniques needed to complete the bracelet:

Crimping
Crimp Bead Covers


Instructions to complete “Out on the Town” bracelet:

Step 1

Using wire cutters, cut the beading wire into seven 12-inch lengths.

Step 2

Place one crimp bead and the first loop on one side of the tube bar clasp onto a 12-inch length of beading wire. Pass the wire back through the crimp bead, and crimp the crimp bead (see Crimping Technique). Cover the crimp bead with a crimp cover (see Crimp Bead Covers Technique), and trim excess wire with wire cutters.

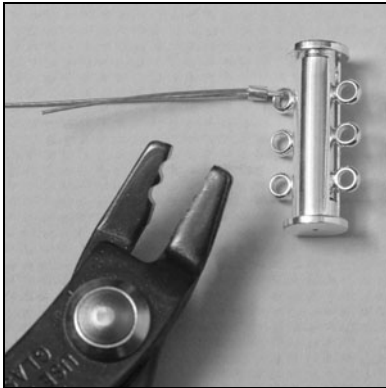

Step 3

Repeat Steps 1 – 2 twice, attaching two more lengths of beading wire to the same loop on the same side of the tube bar clasp.

Step 4


In the same manner as in Step 3, attach two lengths of beading wire to the second loop on the same side of the tube bar clasp.

Step 5

Repeat Step 4 on the third loop.

Step 6

String 56 4mm Light Grey pearl beads onto the first beading wire strand. Use a bead stopper to temporarily secure the end of the wire.

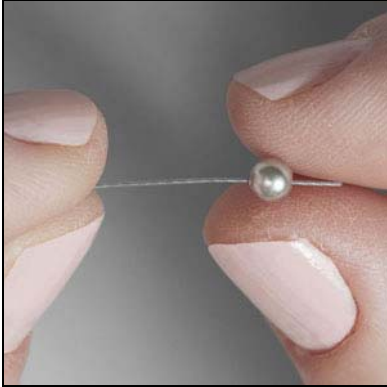**Step 7**

In the same manner as in Step 6, string these beads onto each of the remaining strands of beading wire (one type of bead per strand). Secure each strand temporarily with a bead stopper after stringing:

- 38 – 6mm Pearlescent White pearl beads
- 22 – 10mm Pearlescent White coin pearls
- 38 – 6mm Graphite bicone beads
- 56 – 4mm Pearlescent White pearl beads
- 62 – 4mm Graphite bicone beads
- 38 – 6mm Light Grey pearl beads

Step 8

Using wire cutters, cut a 9-inch length of 3mm Crystal AB round bezel rhinestone chain. Repeat with the 4.5mm Crystal AB round bezel rhinestone chain.



Step 9

Use one smaller chain end to attach one end of the 3mm rhinestone chain to the second loop on the same side of the tube bar clasp used previously. Repeat with a larger chain end to attach the 4.5mm rhinestone chain to the third loop.

**Step 10**

Lay the strung strands onto the work surface vertically. Use one bead stopper to secure the first two strands, a second bead stopper to secure the second two strands, and a third to secure the remaining strands.

**Step 11**

Braid the groups of strands loosely.



Step 12

Remove the bead stoppers. Crimp the free ends of the beading wires to the loops on the second side of the tube bar clasp. Cover the crimps with crimp covers. Use the remaining chain ends to attach the rhinestone chains to the clasp.



*For step-by-step photos and instructions on these and other techniques, visit FusionBeads.com and select **Beading Techniques** from the top navigation bar. You'll find more **Inspiration jewelry ideas** at FusionBeads.com!*